

USER MANUAL

Email-to-SMS (e-2-s) Gateway



Table of content

1. Quick start	4
2. Global Settings	5
2.1 General Settings.....	5
2.2 Email to SMS: Email Server Mode.....	5
2.3 Email to SMS: Email Client Mode	6
2.4 Sender Settings.....	8
2.5 Security Settings	8
2.6 Heartbeat SMS Settings	9
2.7 Email Settings	10
3. Recipients.....	11
3.1 Recipient Directory	11
4. Rule Based Alarming	12
4.1 Rule Based Alarming.....	12
4.2 Recipient Settings.....	12
4.3 Text Settings	12
4.5 Valid email subject examples:	13
5. Keyword Based Alarming	14
5.1 Group Based Settings	14
5.2 Group Settings 1-20	14
6. Binary-Input Alarming	16
6.1 Binary Input Alarm Settings	16
6.2 Binary Input Alarm Recipients	17
6.3. Binary Input Alarming: separate Login.....	17
7. Backup/Restore Database	18
7.1 Backup Database	18
7.2 Backup Global Settings	18
7.3 Restore Database & Global Settings	18
8. SIM card switching - failure safety	19

USER MANUAL

Email-to-SMS (e-2-s) Gateway



9. Additional interfaces for sending SMS	20
9.1 SMS via Webinterface	20
9.2 SMS via Telnet- or SSH-session	20
9.3 SMS via HTTP API	20
9.4 SMS via AT-commands over TCP-session	20

USER MANUAL

Email-to-SMS (e-2-s) Gateway



This manual describes how to use the Email-2-SMS (e-2-s) Gateway.

Generally, the e-2-s gateway is able to convert Emails to SMS.

There are 2 working modes, which are able to work simultaneously:

- **Email-Server mode**
In this working mode, the e-2-s gateway acts like an email-server. The e-2-s gateway can be contacted from any email-client and get emails from the client. After getting the email, the e-2-s gateway evaluates the email-subject or/and the email-body and processes that information to create SMS, according to the user-specific configuration (details see points 4 and 5).
- **Email-Client mode**
In this working mode, the e-2-s gateway collects emails from an existing mailbox (for example mailbox on MS Exchange server) via POP3 or POP3-SSL in definable intervals. After collecting the email, the e-2-s gateway evaluates the email-subject or/and the email-body and processes that information to create SMS, according to the user-specific configuration (details see points 4 and 5).

Additionally the e-2-s gateway is able to convert SMS to Email.

It is also possible to send Heart-Beat SMS, to regularly monitor the e-2-s gateway itself, the sim-card and the provider.

It is possible to send Multipart-SMS with the e-2-s gateway.

The e-mail-subject and the email-body can be used for the analyses. The only requirement for using the email-body is, that the e-mail body needs to be in plain text, otherwise the e-2-s gateway is not able to analyse the text in the e-mail body.

USER MANUAL

Email-to-SMS (e-2-s) Gateway

1. Quick start

- Insert the SIM-card by pushing the black button (to the right of the sim-slot 1).
- Connect the delivered antenna to port "ANT".
- Connect the power-supply to port "PWR".
- Connect your PC via Ethernet cable on port "ETH0".
- **Change** the **network settings** on your PC to **192.168.1.2** (255.255.255.0).
- The e-2-s gateway can be configured via WEB browser. The web interface can be accessed via the following access parameters:

Address: **http://192.168.1.1**

Username: **root**

Password: **root (in gateway models purchased as from January 2020 the default password is: "P<last 8 digits of the serial number>h")**

- Immediately change the default password after the first login, due to security reasons! You can do that in the menu "Administration" → "Change Password".
- Enter the PIN of the SIM-card (in the e-2-s gateway menu "Configuration" → "Mobile WAN" → "PIN"). If the PIN is disabled, leave the field empty.
- If necessary, change the IP-address of the e-2-s gateway according to your local network (in the e-2-s gateway menu "Configuration" → "Lan" → "Primary").
- Choose the right pre-configuration for your use-case in the menu "Administration" → "Change Profile":
 - Profile: Standard (default)
e-2-s gateway works via LAN, without 2G/3G/4G mobile-data-connection. The e-2-s gateway connects to the POP3 mailbox via the Ethernet/LAN.
 - Profile: Alternative 1
e-2-s gateway works via 2G/3G/4G mobile-connection, without LAN. The e-2-s gateway connects to the POP3 mailbox via the Mobile Connection of your SIM card. Attention, data-traffic of your SIM card must be activated.
 - Profile: Alternative 2
Not in use.
 - Profile: Alternative 3
Not in use.

USER MANUAL

Email-to-SMS (e-2-s) Gateway

2. Global Settings

To configure the converting-settings of the e-2-s gateway, please use the webinterface under **“Customization” → “User Modules” → “Email To SMS Gateway”**.

IMPORTANT: Special characters like **ü, €, &**, and so on, will be deleted from every input field in the web interface after pressing the “Apply” button. This is a restriction of current firmware version of e-2-s gateway. But special characters in the email subject can be read by the e-2-s gateway and also sending of SMS with special characters is supported (UTF-8 character set).

The e-2-s gateway is able to send about 20 SMS per Minute. This value depends on some other circumstances as well (telco-provider, time for getting emails, ...).

2.1 General Settings

General Settings	
Enable Module	<input checked="" type="checkbox"/>

Enable Module: The e-2-s gateway functionality will be enabled if the checkbox is checked.

2.2 Email to SMS: Email Server Mode

Settings for the e-2-s gateway to act like an email-server.

The e-2-s gateway can be contacted from any email-client via SMTP protocol and get emails from the client. After getting the email, the e-2-s gateway evaluates the email-subject or/and the email-body and processes that information to create SMS.

Email to SMS: Email Server Mode	
Enable Server Mode	<input checked="" type="checkbox"/>
Email Server Port	<input type="text" value="25"/>
Debug Enabled	<input checked="" type="checkbox"/>
In Email Server Mode the Email-to-SMS-Gateway acts like an SMTP server at the given port. Email subjects will get sent to the given number in the address. Address needs to be in the form of number@ip/domain (eg: +4367612345678@e2s.at or +4367612345678@192.168.1.1).	

Enable Server Mode: The Email-Server functionality will be enabled if the checkbox is checked. We recommend using the Email-Server-Mode in your internal network only. Using Email-Server-Mode on a public IP-network requires the activation of the Email-2-SMS Gateway firewall.

Email Server Port: The IP-port, on which the e-2-s gateway listens for incoming SMTP-connections from email-clients.

Email Server Debug Enabled: If enabled, more detailed information can be found in the system-log of the e-2-s gateway (“Status” → “System Log”). Enable this feature only in case of communication problems with the email-client.

USER MANUAL

Email-to-SMS (e-2-s) Gateway

The email-address-recipient in your email-client needs to be in the following format:
[recipient-number@ip/domain](#)

For example:

[+43676123456@e2s.at](#)

[+4367612345678@192.168.1.1](#)

Example SMTP-configuration from any email-client:

Email Settings	
NAME	VALUE
SMTP Server	<input type="text" value="192.168.1.1"/>
SMTP Port	<input type="text" value="25"/>
Authentication	<input type="checkbox"/>
Secure TLS mode	<input type="checkbox"/>
Username	<input type="text"/>
Password	<input type="text"/>
Importance	Normal ▾
FROM	<input type="text" value="e2s@e2s.at"/>
Subject	Subject, which will be converted to SMS...
TO	<input type="text" value="+4367612345678@e2s.at"/>

2.3 Email to SMS: Email Client Mode

Settings for the email account, where e-2-s gateway gets emails from.

In this working mode, the e-2-s gateway collects emails from an existing mailbox (for example mailbox on MS Exchange server) via POP3 or POP3-SSL in definable intervals. After collecting the email, the e-2-s gateway evaluates the email-subject or/and the email-body and processes that information to create SMS.

Email to SMS: Email Client Mode

Enable Client Mode

Server Protocol

Email Server URL

Email Server Port

Email Username

Email Password

Retrieval Interval sec
In Email Client Mode the router collects emails from an external POP3 server and sends SMSs after analysing the subject.

Email-Error SMS number
SMS number that gets notified in case of Email errors.
An empty SMS number field disables this feature.

Email-Error threshold
The threshold value defines how many consecutive errors can occur before the SMS alarming should get triggered.
A value 0 disables this feature.

USER MANUAL

Email-to-SMS (e-2-s) Gateway

<u>Enable Client Mode:</u>	The Email-Client functionality will be enabled if the checkbox is checked. If disabled, no emails will be collected from the mailbox.
<u>Server Protocol:</u>	Defines the protocol of the connection to your email server: POP3: unsecured plain text connection POP3-SSL: ssl secured connection
<u>Email Server URL:</u>	The URL of your email server.
<u>Email Server Port:</u>	The Port of your email server.
<u>Email Username:</u>	The username to log into the email server.
<u>Email Password:</u>	The password to log into the email server. To initially set or change the password, type a new password in the input field. The password will not be visible in the input field after saving with "Apply" button.
<u>Retrieval Interval:</u>	Polling interval for the POP3 Mailbox, to define how often the emails will be collected. Important: If you use a huge amount of emails together with a lot of recipients, you have to set a higher interval. The minimum interval is 30 seconds.
<u>Email-Error SMS number:</u>	This phone-number gets notified via SMS, in case of problems with getting the emails from the email-server. If this field is empty, the feature will be disabled.
<u>Email-Error threshold:</u>	This value defines how many email-errors need to occur, before the SMS alarming will be triggered. Value "0" disables the feature.

USER MANUAL

Email-to-SMS (e-2-s) Gateway

2.4 Sender Settings

The e-2-s gateway is able to analyse the email-subject and the email-body.

Email-body only works, if the email-body is in plain text format, otherwise the e-2-s gateway can't analyse the text.

In these settings you can define, if you want to use the email-subject or the email-body for analysis. Also the maximum SMS length can be defined.

Sender Settings	
	Decide whether to scan email subject and/or email body.
Use email subject	<input checked="" type="checkbox"/>
Use email body	<input checked="" type="checkbox"/>
Max individual SMS (Multipart)	<input type="text" value="2"/>
	Maximum individual SMS parts of a multipart SMS (between 1 and 9). Each individual part can be up to 140 chars (depending on encoding)

Use email subject: Activate this checkbox, if you want to analyse the email subject

Use email body: Activate this checkbox, if you want to analyse the email body

Max individual SMS (Multipart): The value for the maximum parts of the Multipart SMS. The value must be between 1 and 9. Each single SMS-part has a maximum of 140 characters. So the maximum length of a multipart-SMS is 1260 characters!

Attention: Multipart uses multiple SMS! Keep in mind, when calculating the sim-contract and the SMS cost!

2.5 Security Settings

Security Settings	
Auth Token	<input type="text" value="1234"/>
	An auth token will be validated otherwise no SMS will get send. Value 0 disables this feature.

Auth Token: There can be a security token (4 numbers) within the email-subject, which will be checked by the e-2-s gateway. If this token is not present in the email-subject, the SMS will not be sent. If the field "Auth Token" is empty or set it to 0, the feature is deactivated and the e-2-s gateway will not check for a token in the email-subject. If the token is active (4 digits) then the feature works in both alarming modes (rule-based and keyword-based).

USER MANUAL

Email-to-SMS (e-2-s) Gateway

2.6 Heartbeat SMS Settings

The e-2-s gateway is able to send periodic SMS (heartbeat SMS) to one recipient number, to check that the device is still powered up and working correctly.

Heartbeat SMS Settings	
Heartbeat Interval	weekly
Hour of Day	8 Hours. [0-23]
Minute of Hour	39 Minutes. [0-59]
Day of Week	2 Day [1-7, Sunday = 1]
Mobile Number	+4367612345678
SMS Text	All OK! The email2sms gateway is up and running
If enabled a heartbeat SMS gets sent in the specified interval.	

Heartbeat Interval: It is possible to send heartbeat SMS periodically:

- daily
- weekly
- monthly

Hour of Day & Minute of Hour: Define the time for receiving heartbeat SMS.

Day of Week / Month: Define the day-of-week / day-of-month for receiving heartbeat SMS.

Mobile Number: Define the recipient number for heartbeat SMS.

SMS Text: Define the text for heartbeat SMS.

System-Time of e2s:

The current system-time of e-2-s gateway can be seen under "Status" → "General" → "System Information" → "Time".

The e-2-s gateway can synchronize its own system-time with external NTP-servers, which can be configured under "Configuration" → "Services" → "NTP" → "Synchronize clock with NTP server". Automatic switching for Daylight-Saving-Time is implemented in the e-2-s gateway.

USER MANUAL

Email-to-SMS (e-2-s) Gateway

2.7 Email Settings

The e-2-s gateway can not only get emails, but also send emails for the following 3 reasons:

- Send alarm email, if the e-2-s gateway was not able to send out one of the SMS
- Send log-file email with the historic SMS-sending activities
- Convert SMS to email

Email Settings	
SMS-Error email	<input type="text" value="recipient@domain.com"/> Email address that gets notified in case of an SMS error. An empty field disables this feature.
Log destination email	<input type="text" value="recipient@domain.com"/> Email address that the log files should get sent to. An empty field disables this feature.
SMTP Configuration	Configure Email SMTP Server General Email (SMTP) configuration is necessary for sending out log/error emails.

SMS-Error email: Email address, where the information about failure in SMS sending will be sent to. The e-2-s gateway will try 3 times to send the SMS. If the third try also fails, e-2-s gateway will send an email to the predefined Email address (defined in the field “SMS-Error email”). Leave the field empty to deactivate the feature.

Note: If the used SMS-receive-telephone-number is wrong, the e-2-s gateway is not able to detect this situation and so there will no SMS-Error-email be sent. The e-2-s gateway is only able to detect problems in the communication with the telco-provider!

Log destination email: Email address, where the history log files should be sent to. The history-log-file will be created automatically and it stores every SMS-activity which will be done by the e-2-s gateway.

The file will be sent automatically, if it reaches 60 kilobytes in size. The file will reside in the gateway (/var/data/email2sms/history.log) until it reaches the file size limit – then it will be sent to the given email address. Leave the field empty to deactivate the feature (in this case, the log file resides on the e-2-s gateways file system and will get reset when the file reaches 60 kilobytes in size).

SMTP Configuration: To be able to send out emails, you need to configure a SMTP-Server. By using the link “Configure Email SMTP Server” you will be redirected to the page for entering the SMTP-Server information.

USER MANUAL

Email-to-SMS (e-2-s) Gateway

Converting incoming SMS to Email:

SMS to Email Mode	
Enable SMS to Email Mode	<input checked="" type="checkbox"/>
SMS to Email	<input type="text" value="recipient@domain.com"/>
Email address that should receive message texts of incoming SMSs. An empty field disables this feature.	
Dynamic recipient parsing	<input type="checkbox"/>
If this field is enabled the SMS text will be scanned for an email address. This email address will then get the SMS text mailed.	

SMS to Email:

Email address, where the information about incoming SMS will be sent to. The email contains the full content of the SMS and the sender-mobile-number (within the email-subject and the email-body). Leave the field empty to deactivate the feature. Special characters like ü, €, &, and so on, are currently not supported by the feature "SMS to Email".

Dynamic recipient parsing: If this checkbox is enabled, the SMS text will be scanned for an email address (word containing the "@" sign). If a valid email address will be found within the SMS, the email will be sent to this email-address too. Write the sign "@" into the field "SMS to Email", if you want to use dynamic recipient parsing only.

3. Recipients

In the recipients tab you can create your own telephone book. These telephone book entries can be used in both alarming methods (Rule Based Alarming & Keyword Based Alarming). It is possible to store up to 200 entries in the telephone book.

3.1 Recipient Directory

Recipients			
Recipient 1	Name	<input type="text" value="John Smith"/>	Phone Number <input type="text" value="+436712341373"/>
Recipient 2	Name	<input type="text" value="Max Mustermann"/>	Phone Number <input type="text" value="06643312954"/>
Recipient 3	Name	<input type="text" value="Chuck Norris"/>	Phone Number <input type="text" value="+436645512366"/>
...			
Recipient 199	Name	<input type="text"/>	Phone Number <input type="text"/>
Recipient 200	Name	<input type="text"/>	Phone Number <input type="text"/>

Recipients: Enter the name and the phone-number of the different SMS recipients.
Format of the number: +4366412345678 or 066412345678.

USER MANUAL

Email-to-SMS (e-2-s) Gateway

4. Rule Based Alarming

Rule-Based-Alarming is recommended for alarming to single or only a few telephone numbers. In this method the telephone-number of the recipient and also the SMS-text can be a part of the email subject. For Rule-Based-Alarming it is necessary to be able to create your own email subject. If your system can only send predefined emails, it's recommended to use Keyword-Based-Alarming (see point 5).

4.1 Rule Based Alarming

Rule Based Alarming	
Enable Rule Based Alarming	<input checked="" type="checkbox"/>

Enable Rule Based Alarming: The Rule-Based-Alarming functionality will be enabled if the checkbox is checked.
If disabled, the email-subjects of incoming emails will not be checked against the rules of Rule-based-alarming (see point 4.4.).

4.2 Recipient Settings

Recipient Settings		
Recipient 1	<input type="text" value="Herbert Huber"/>	<input checked="" type="checkbox"/> default <input checked="" type="checkbox"/>
Recipient 2	<input type="text" value="Hermann Maier"/>	<input checked="" type="checkbox"/> default <input checked="" type="checkbox"/>
Recipient 3	<input type="text" value="Chuck Norris"/>	<input checked="" type="checkbox"/> default <input type="checkbox"/>
...		
Recipient 9	<input type="text"/>	<input checked="" type="checkbox"/> default <input type="checkbox"/>
Recipient 10	<input type="text"/>	<input checked="" type="checkbox"/> default <input type="checkbox"/>

Recipient: The recipient, to which a SMS will be sent if the rule matches. The recipient can be deleted by pressing the **[x]** Button next to the input field.

default: Marks the current recipient as default recipient. There can be more than one default recipients at the same time. The default recipient will be chosen, if there is no recipient defined in the email subject.

4.3 Text Settings

Text Settings	
Text 1	<input type="text" value="Predefined Default Text"/> default <input checked="" type="radio"/>
Text 2	<input type="text"/> default <input type="radio"/>
...	
Text 10	<input type="text"/> default <input type="radio"/>

Text: The predefined SMS texts 1-10, which can be used for the rules (T1 – T10).

default: Marks the current text as default text. The default text will be chosen, if there is no text defined in the email subject. There can only one default text at the same time.

USER MANUAL

Email-to-SMS (e-2-s) Gateway

4.4 Email Subject Definition

The email subject defines the recipient and the text of the SMS.

There are 2 working-methods of the Rule-Based-Alerting: **static** and **dynamic**

In the **static** mode you can define recipients that are pre-configured (see 4.2) by inserting **R(number, ...)** where number refers to a configured recipient.

You can define a text which is configured in the settings (see 4.3) by its number **Tnumber**.

If you **don't include any recipient definition** in the email subject then the SMS will be sent to all configured **default recipients**.

If you **don't include any text definition** in the email subject then the SMS will contain the configured **default text**.

In the **dynamic** mode you can use a text **TDtext** and a recipient **RD(phonenummer)** in your email-subject that doesn't have to be configured in the settings.

Both methods are working parallel and can be used together.

Marker Definition	Name	Description	Required
Annnn	Auth Token	nnnn ... 4 digits	yes if not 0
R(n[,n]*)	Recipient List	n[,n]* ... 1 or more of the configured recipients (1-10)	no
Tn	Text number	n ... number of configured SMS text	no
RD(n)	Dynamic Recipient Input	n ... a single phone number	no
TDx*	Dynamic Text input	x* ... text characters of the SMS text (max 150 chars)	no

Legend:

* ... repeat

[] ... optional

4.5 Valid email subject examples:

static:

- **A1234_R(1,2)_T1** send text **1** to recipients **1** and **2** if **auth token** is **1234**
- **A1234_R(4)_T5** send text **5** to recipient **4** if **auth token** is **1234**
- **A1234_R(1,2)** send **default** text to recipient **1** and **2** if **auth token** is **1234**
- **R(1,2)** send **default** text to recipient **1** and **2** if **auth token** is **0**
- **A1234_T3** send text **3** to **default** recipients if **auth token** is **1234**
- **A1234** send **default** text to **default** recipients if **auth token** is **1234**
- any send **default** text to **default** recipients if **auth token** is **0**

dynamic:

- **A1234_RD(+43123456)_TDhello world** send „hello world“ to +43123456 if **auth token** is **1234**
- **ANY_RD(+43123456)_TDhello world** send „hello world“ to +43123456 if **auth token** is **0**

static & dynamic:

- **ANY_R(1)_TDhello world** send „hello world“ to recipient **1** if **auth token** is **0**

USER MANUAL

Email-to-SMS (e-2-s) Gateway

5. Keyword Based Alarming

Keyword-Based-Alarming is recommended for alarming to a group of telephone numbers. In this method it is only necessary to find a match between a keyword in the email subject and the predefined keyword in the group settings. For the Keyword-Based-Alarming it's NOT necessary to define your own email subject. You only need to know one keyword from your email subject.

5.1 Group Based Settings

Group Base Settings	
Enable Keyword Based Alarming	<input checked="" type="checkbox"/>
Advice:	
For Further settings see menu items "Group 1" - "Group 20"	

Enable Keyword Based Alarming: The Keyword-Based-Alarming functionality will be enabled if the checkbox is checked. If disabled, the email-subjects of incoming emails will not be checked against the keywords, which are defined in the groups of Keyword-based-alarming (see point 5.2.).

5.2 Group Settings 1-20

Group 1 Settings					
Group 1					
Name	Datacenter Temperature Alarm				
Keyword 1	Temperature	Keyword 2 Datacenter##Temp			
Keyword 3		Keyword 4		Keyword 5	
Recipient 1	John Smith	x			
Recipient 2	Chuck Norris	x			
Recipient 3	Max Mustermann	x			
Recipient 4		x			
Recipient 5		x			
Recipient 6		x			
Recipient 7		x			
Recipient 8		x			
Recipient 9		x			
Recipient 10		x			
Recipient 11		x			
Recipient 12		x			
Recipient 13		x			
Recipient 14		x			
Recipient 15		x			

It is possible to define 5 keywords for each of the 20 groups. If the email-subject contains one of these keywords, the subject (its first 160 characters) will be sent as SMS to the recipients of this particular group. If the auth token is configured as a 4 digit number then the auth token must part of the email. If the auth token is configured as 0, only the keyword has to match.

USER MANUAL

Email-to-SMS (e-2-s) Gateway

- Name: The name of the group, which will be shown at the overview on the left side of the webinterface.
It does not have any effect on the functionality.
- Keyword 1-5: The keyword that needs to be in the email-subject. The keyword is **case sensitive!** Due to fact, that it is not possible to enter special characters on the webinterface of email-2-sms gateway, it is necessary to use **##** as **wildcard for 1 or more characters!** So, it is also possible to separate 2 words by **##** in one keyword.
If you want to convert all incoming emails (without any keyword-checking) into SMS, then you can use only **##** as the keyword.
If all keywords are empty, the group is deactivated and no SMS will be sent.
- Recipient 1-15: The recipient that will receive the SMS. The recipient can be selected from the global recipient-list-window, which appears when you click into the recipient-field. The recipient can be deleted by pressing the **|x|** Button next to the input field.

USER MANUAL

Email-to-SMS (e-2-s) Gateway

6. Binary-Input Alarming

Binary-Input-Alarming can only be used if your e2s-hardware is equipped with digital inputs (different hardware models are available).

The alarm will be sent out, if there is a change on the Binary-Input (dry-contact).

For example flame detectors or door-contacts which are connected to the Binary Input.

6.1 Binary Input Alarm Settings

Binary Input Alarming Mode	
Enable Binary Alarming Mode	<input checked="" type="checkbox"/>
Alarm message text	<div style="border: 1px solid #ccc; padding: 5px; min-height: 40px;">Hallo Herr %s, Achtung - Brandalarm!</div>
	<small>Message text that will be sent to the binary recipients. You can include the macro '%s' in the alarm text which will be replaced by the recipient name.</small>
Hour of cleanup	<input type="text" value="22"/> hour of day
	<small>The hour of the day at which the recipients should get cleaned up (1-24). '0' or empty disables the cleanup.</small>

Enable Binary Alarming Mode: Set this checkbox, to enable the functionality of this alarming mode.

Alarm message text: Message text which will be sent to the recipients. The macro “%s” can be used within the text, to replace the macro by the name of the recipient.

Hour of cleanup: It is possible to delete the recipients (which are set under “Binary Input Alarm Recipients”) automatically every day. The field requires a number from 1 to 24, which stands for the amount of hours after which the recipients will be cleaned up. “0” or an empty field will disable the cleanup function.

USER MANUAL

Email-to-SMS (e-2-s) Gateway


6.2 Binary Input Alarm Recipients

Binary Recipients						
Recipient 1	Name	<input type="text" value="John Smith"/>	Phone Number	<input type="text" value="+436712341373"/>	fixed <input type="checkbox"/>	<input type="button" value="Send test SMS"/>
Recipient 2	Name	<input type="text" value="Chuck Norris"/>	Phone Number	<input type="text" value="06645512366"/>	fixed <input checked="" type="checkbox"/>	<input type="button" value="Send test SMS"/>
Recipient 3	Name	<input type="text"/>	Phone Number	<input type="text"/>	fixed <input type="checkbox"/>	<input type="button" value="Send test SMS"/>
...						
Recipient 28	Name	<input type="text"/>	Phone Number	<input type="text"/>	fixed <input type="checkbox"/>	<input type="button" value="Send test SMS"/>
Recipient 29	Name	<input type="text"/>	Phone Number	<input type="text"/>	fixed <input type="checkbox"/>	<input type="button" value="Send test SMS"/>
Recipient 30	Name	<input type="text"/>	Phone Number	<input type="text"/>	fixed <input type="checkbox"/>	<input type="button" value="Send test SMS"/>
<input type="button" value="Apply"/>						<input type="button" value="Reset Form"/>

It is possible to enter up to 30 SMS recipients for the binary input alarming feature. You can type in the name of the recipient and the phone number. The option “fixed” saves the recipient from being deleted automatically every day at the “hour cleanup”. It is possible to send test-SMS to every single recipient individually.

6.3. Binary Input Alarming: separate Login


The feature “Binary-Input Alarming” was implemented for alarming deaf people via SMS in case of fire in a building. For this application, the concierge of the building should only be able to maintain the alarm-recipients, but not do any other settings on the e2s. To reach this goal, it’s possible to have a separate Log-In for the concierge. First you have to add a new separate user in the gateway settings under “Administration” → “Users”:

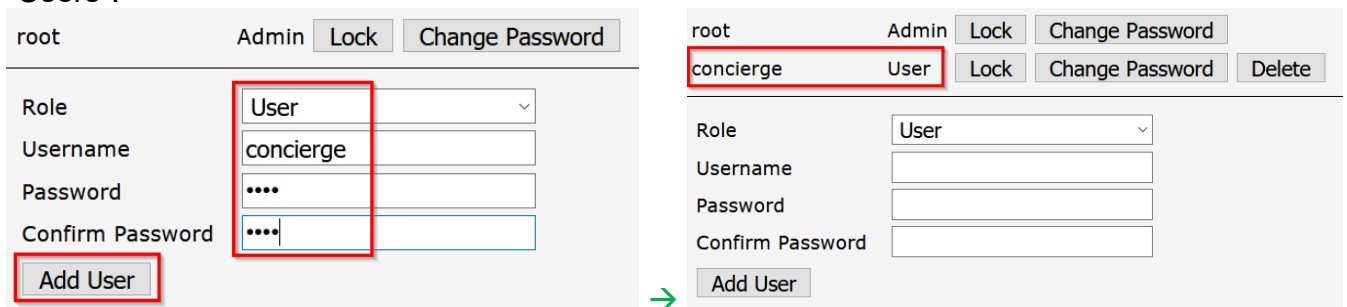

The image shows two screenshots of the user management interface. The left screenshot shows the 'Add User' form with the role set to 'User', username 'concierge', and password fields. The right screenshot shows the user list with 'concierge' added as a 'User'.

The concierge can reach the separate Log-In page via following link:

https://192.168.1.1/module/email2sms/alarming_index.cgi

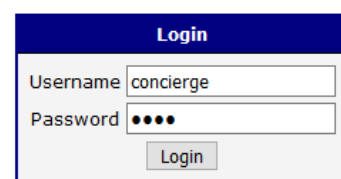

The image shows a login form with the title 'Login'. It has fields for 'Username' (containing 'concierge') and 'Password' (containing four dots). There is a 'Login' button below the fields.

The concierge user only has access to settings, which are related to “Binary-Input Alarms”.

USER MANUAL

Email-to-SMS (e-2-s) Gateway


7. Backup/Restore Database

After finishing the configuration of your e-2-s gateway, it would make sense to back up the settings and keep it for later usage.

The database file contains all settings besides the “Global Settings”.

7.1 Backup Database

Is it possible to download the database file at the menu “Status” → “Backup Database”.

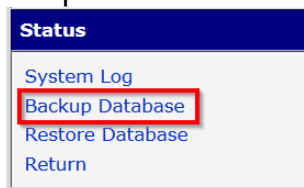

7.2 Backup Global Settings

The global settings can be backed up by using the main-menu at “Administration” → “Backup Configuration”.




7.3 Restore Database & Global Settings

Restoring the database file can be done at the menu “Status” → “Restore Database”.

After clicking the “Restore Database” menu item, you are able to click the “Choose File” button and choose a database file, which was saved in former days.

By pressing apply you replace the current database file with the just uploaded file!

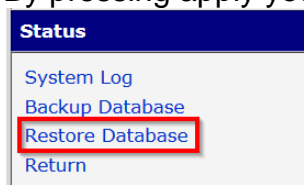

The global settings can be restored by using the main-menu at “Administration” → “Backup Configuration” → “Restore Configuration”.

USER MANUAL

Email-to-SMS (e-2-s) Gateway

8. SIM card switching - failure safety

For reasons of high availability and redundancy, you can use both SIM slots of the gateways. If one SIM card loses registration to cellular network, the second SIM card gets active. Therefore you have to enable the feature “Switch to other SIM card when connection fails” in “Configuration” → “Mobile WAN”:

Switch to other SIM card when connection fails

It might make sense for your application to think about switching back to the default SIM card, after a certain timeout.

Switch to default SIM card after timeout

Initial Timeout	<input type="text" value="600"/>	min
Subsequent Timeout *	<input type="text" value="60"/>	min
Additive Constant *	<input type="text" value="5"/>	min

Initial Timeout: Time that the router waits before the first attempt to switch back to the default SIM card (from 1 to 10000 minutes).

Subsequent Timeout: Time that the router waits after an unsuccessful attempt to switch back to the default SIM card (from 1 to 10000 minutes).

Additive Constant: Time that the router waits for any further attempts to revert to the default SIM card. This time is the sum of the time specified in the “Subsequent Timeout” and the time specified in this parameter (from 1 to 10000 minutes).

USER MANUAL

Email-to-SMS (e-2-s) Gateway

9. Additional interfaces for sending SMS


Besides the functionality of converting emails to SMS, there are some other possibilities to trigger the sending of SMS.

The following interfaces are provided:

9.1 SMS via Webinterface

For testing purpose (to try if your SIM card is able to send SMS) it is the best to use the Web-GUI of e-2-s gateway.

This can be done at the main-menu under “Administration” → “Send SMS”.

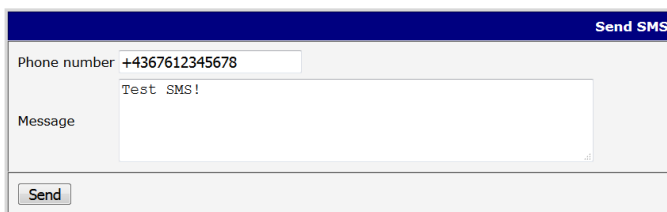

9.2 SMS via Telnet- or SSH-session

It is possible to use a simple command inside a Telnet- or SSH-Session for sending SMS. A description can be downloaded here:

http://download.bellequip.at/Anleitung_SMS_over_IP_Telnet.pdf

9.3 SMS via HTTP API

It is possible to use http-get command for sending SMS.

A description of the http-API can be downloaded here:

http://download.bellequip.at/HTTP_API_ab_Firmware_5.3.1.pdf

9.4 SMS via AT-commands over TCP-session

It is possible to use AT-commands over TCP-session for sending SMS.

A description can be found here:

http://download.bellequip.at/SMS_AT_commands_over_TCP_session.pdf

A very similar way is to use AT-commands over virtual COM interface:

http://download.bellequip.at/SMS_AT_commands_over_TCP_session_virtual_COM.pdf

Download this documentation as PDF:

http://download.bellequip.at/Manual_E2S-Gateway_06.2020.pdf